

AC ULTRA Plus Air-Conditioner Remote Control User's Guide

Product Description

The AC ULTRA PLUS is the leading replacement A/C remote control in Australia. With over 1,000 codes it is compatible with 99% of the air conditioners sold in Australia. It is simple and easy to program and will include many of the features of your original remote.

Need support? Ring Thermo Controls Mon-Fri 9am-5pm on 03 8899 6272. You can also scan the QR code on the front for the latest codes.

Instructions to program your remote control with your air conditioner (A/C)

1. Open the battery cover and insert two AAA (UM-4 or R03) batteries.
2. Find your A/C code brand on the back of these instructions. If there is more than one code for one brand, you will have to try them one by one. E.g. for FUJITSU, try model codes 0127 to 0137 then 0464 etc. Next, lift the front cover.
3. To Program your four digit code: Press and hold the **"SELECT"** key, the four digit code on the LCD will begin flashing. Press **"CODE"** - or **+** until required brand code appears. Then press the **"ENTER"** key, the brand code stops flashing. Aim the remote at the A/C and press the **"POWER"** key, your remote is programmed and you can control your air conditioner. If not, select the next code from the table and test again.

Brand not listed? Code you have tried did not work? DON'T PANIC

If you don't know the brand of your air conditioner, you cannot find your brand on the list or the codes you tried don't work? Don't worry, there is probably a code in the remote that will get your A/C working. Please follow these steps:

1. Press and hold the **"SELECT"** key, the four digit code on the LCD will begin flashing. Point the remote control at the A/C, begin pressing the **"SELECT"** key. Continue to press the **"SELECT"** key. Every time you press the **"SELECT"** key the remote is sending an infrared signal to turn on the A/C. Continue to press the **"SELECT"** and eventually the remote will find a code to turn on your A/C. You will hear a beep or the fan will turn on.

Be patient, it can take up to ten minutes to cycle through 1,028 codes. Alternatively you can hold down the **"SELECT"** key for 5 seconds and it will cycle through itself. This will take 20 minutes. After the A/C turns on, try other function keys. If they do not work, repeat above steps finding the correct code. Write the number on the inside cover if you need to refer back to it. If this fails, please contact us.

Switching between Celsius and Fahrenheit

Press TEMP UP and TEMP DOWN simultaneously.

Clock setting of remote control

1. Press the **"CLOCK"** key, the clock on LCD will flash.
2. Press **"TIME"** + or -, adjust to correct time. Time is in 24 hour format.
3. Press the **"CLOCK"** key again, your clock is now set.

Timer ON/OFF settings of remote control. (Remote must be in-line-of-sight!)

Timer ON: (can only be set with the air conditioner OFF)

1. Press the “**TIMER ON**” key, the clock signal on LCD appears and time flashes.
2. Press “**TIME**” + **or** – key, to adjust the time when you want the air conditioner to turn on automatically.
3. Timer flashes and it will stop after 5 seconds. The LCD display current time and clock signal. Setting is complete. To check the ON time (once set) simply press the “**TIMER ON**” once.

Timer OFF: (can only be set with the air conditioner ON)

1. Press the “**TIMER OFF**” key, the clock signal on LCD appears and time flashes.
2. Press “**TIME**” + **or** - adjust the time when you want to make the air conditioner turn off automatically.
3. Time flashes, and stops after 5 seconds. The LCD display current time and clock signal. Setting is complete. To check the OFF time (once set) simply press the “**TIMER OFF**” once. To nullify timer set to 0:00.

Note:

1. After timer setting is finished, make sure the AC unit and remote are in Line of Sight. The remote needs to communicate with the AC unit to work.
2. If you want to see the timer settings, press “**TIMER ON/OFF**” key, the LCD will display the time, and it will default to the current time after 5 seconds.
3. NOTE: You can only set the AC unit to go ON or OFF, not both at the same time.

Attention:

1. Batteries usually last between one and two years. If it is not used for a long time, remove the batteries to avoid battery leakage that could damage the machine. When the LCD looks dim, change both batteries. (New and old batteries can not be used together) After the batteries are replaced, it is not necessary to set model code again. You will need to set the time again.
2. If abnormal situation appears because of using wrong code reset the unit by placing pen tip or other item into “reset” hole. Press to restore normal status.
3. The LCD will display the code number when pressing the model code “Enter” key. After 5 seconds it displays the time.
4. Note: this remote control only works by direct Line of Sight. Check carefully there are no barriers between remote and air conditioner when using the timer ON/OFF function. Because the operation is effective only when the air conditioner receives the timer on/off signal from remote controller both units must be in Line of Sight of each other.
5. The manufacturer has the right to change the parameters and functions of this product.

Controllable distance: Up to 8 meters

Battery model: Battery AAA(UM-4,R03)×2

Dimension: L127×W48×D22mm

Weight: Approx 84g (with batteries)

